

## 740CB Wireless Keyless Entry works with the following GDO models:

The following units have a Grey, White or Yellow learn button:

140-9	240-9	450-9	1000	3000	5000	701WHC
150-9	350-9	550-9	2000	4000	700WHC	4001


The following units have a Green learn button:

1100	3000	4600	4600-2K	7200	8100M	9602	711WHC
2100	4100	4600-2	5100	8100	9601	710WHC	CSO

## Programming the 740CB Wireless Keyless Entry


**1**

Locate the LEARN BUTTON on the back or panel of the motor unit. You may need to remove a light cover or control center cover to gain access. This button may be yellow, white, gray or green in color and will have an LED indicator light next to it.

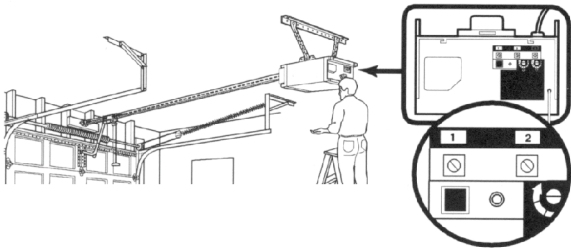

**2**

Press and release the LEARN BUTTON. This turns the receiver on for thirty seconds. Within this 30 second period, you must enter your new 4-digit PIN into the keypad and hold the ENTER button for five seconds.

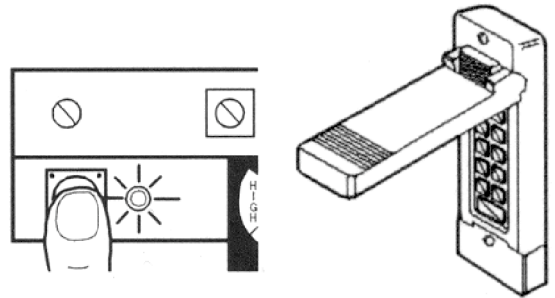

**3**

When the light on the keypad stops flashing, test your new code by entering the 4-digit PIN and ENTER.

